




Easy Step Safety Gate

Barrière de sécurité à ouverture facile

Reja de seguridad easy step

Models / Modèles / Modelos: 1160, 1160 B

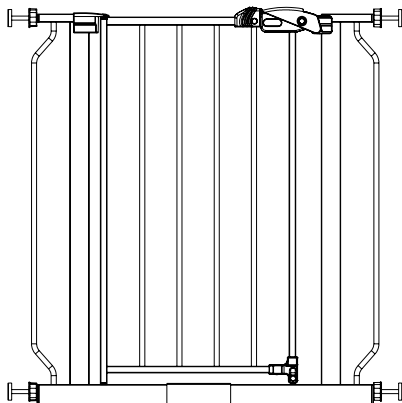

- READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF GATE. KEEP INSTRUCTIONS FOR FUTURE USE.
- LIRE TOUTES LES INSTRUCTIONS AVANT D'ASSEMBLER ET D'UTILISER LA BARRIÈRE. CONSERVER CES INSTRUCTIONS POUR UNE UTILISATION ULTÉRIEURE.
- LEA TODAS LAS INSTRUCCIONES ANTES DE MONTAR Y USAR LA REJA. GUÁRDELAS PARA UTILIZARLAS COMO REFERENCIA.



www.regalo-baby.com



Regalo International, LLC.

3200 Corporate Center Drive, Suite 100 / Burnsville, MN 55306, USA / , É.-U. / , EE. UU.



866.272.5274 (U.S. only / aux États-Unis seulement / solo en EE. UU.) or / ou / o 952.435.1080

Made in China / Fabriqué en Chine / Hecha en China

From Our Family To Yours Thank You

Thank you for your order! We're so excited to share our products with your family.

We'd love to see how you're using them. Be sure to tag @regalobaby and show off your little one's essentials! Don't forget to follow us on social media for the latest updates, sales, and giveaways.




If you have further questions or need help while assembling your product, please reach out to our amazing customer service team members!

☎ 866.272.5274 (US Only) or 952.435.1080

Before Assembly

English

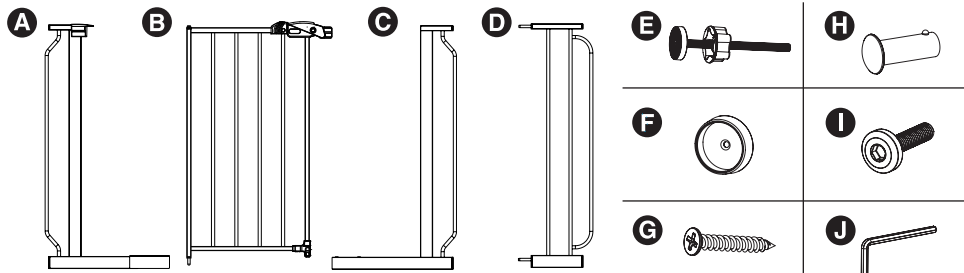

PLEASE CHECK TO MAKE SURE YOU HAVE THE FOLLOWING PARTS:

- | | |
|------------------------------------|--|
| A Left Side Frame Half (1) | F Wall Cups (4) |
| B Gate Door Panel (1) | G 1" Wall Mount Screws (4) |
| C Right Side Frame Half (1) | H Spring Loaded Upper Door Mounting Pin (1) |
| D 6" Extension (1) | I Frame Assembly Screws (2) |
| E Threaded Spindle Rods (4) | J Hex Key (1) |

NOTE

MODEL NO.

MAX SIZE

1160

29 ↔ 38.5 in, ↑ 30 in tall

BEFORE USING PRODUCT

Read and follow all instructions carefully to ensure that your gate and extensions are properly installed. Improper installation could result in the gate becoming unstable or dislodged from the doorway. Always make sure the extension is securely attached to the gate before using. The safety of your child is your responsibility. Please keep these instructions for your reference.

IMPORTANT

- Never use more than two extensions per side of gate.
- If hardware mounting to a surface other than drywall or wood, please consult with a professional about installation.
- Base locks are to be used at all times, on both sides of the gate.

REMOVING YOUR GATE FROM THE WALL

To remove your gate from the wall, rotate the adjustment wheels on each of the (4) threaded spindle rods to depressurize the gate from its doorway or opening. Then, gently pull or push the gate free from its doorway or opening.

CARE AND MAINTENANCE


Periodically check the gate for signs of damage, wear, or missing components. Do not use if any part is missing, worn or damaged. Check the gate regularly to ensure all the hardware and mountings are tightened. Do not use abrasive cleaners or bleach. Clean by sponging with warm water and a mild detergent.

90 DAYS LIMITED WARRANTY

If, during the first 90 days after consumer purchase of the item, under reasonable and non-commercial use and conditions of maintenance, it fails while owned by the original purchaser because of the quality of materials or workmanship of finish and assembly, Regalo International, LLC, will replace or repair it at Regalo's option. PROOF OF PURCHASE REQUIRED.


Assembling and Installing Your Gate

STEP 1

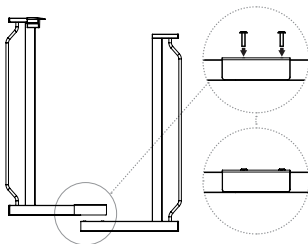


Take the left (A) and right (C) gate frame halves and align the holes in the lower horizontal tube. Place the frame halves together and then using the frame assembly screws (I), tighten the two halves together.

STEP 2

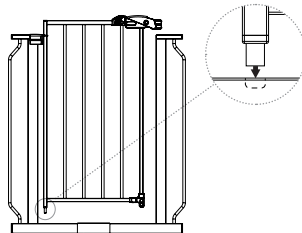

Lower the gate door (B) into the assembled gate frame and insert the lower gate door pin into the mounting hole on the frame.

STEP 3

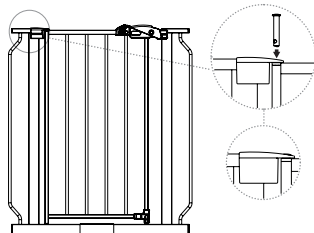


Align the hole in the upper corner of the gate door with the hole in the door mounting bracket. Insert the spring loaded mounting pin (H) into the hole in the mounting bracket and the door.

STEP 4



Locate the (4) threaded spindle rods (E). Rotate the adjustment wheels along the threading, eliminating the gap between the adjustment wheel and the rubber foot.


STEP 5

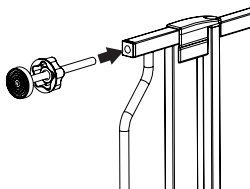

Insert the (4) threaded spindle rods into the holes at each of the four corners of the gate.

NOTE: Once the spring loaded mounting pin is inserted into the gate door hole, it cannot be taken out again by hand.

STEP 6

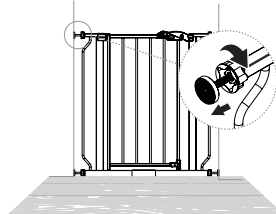

Position the gate so that it is level and centered within your doorway or opening. Rotate the adjustment wheels on the threaded spindle rods in the opposite direction as in Step 4, expanding the gap between the rubber foot and the adjustment wheel. Expand each of the (4) threaded spindle rods until they make contact with the doorway or opening. Do not fully tighten the threaded spindle rods yet.


NOTE: You will notice a slight gap between the gate door latch and the frame tube. This is not a defect. Your gate is a pressure mounted gate and this gap will disappear once you tighten your gate in the doorway opening.

NOTE: It may be necessary to hold the threaded spindle rods or rubber feet while rotating the adjustment wheels to ensure the entire unit does not rotate.

NOTE: The gap between the gate and wall should not exceed more than 2.5 inches. Make the appropriate adjustment to ensure you have installed your gate safely.

Operating the Door Latch


STEP 7

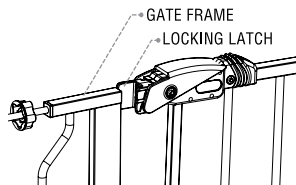

When you are satisfied with the general placement of your gate, fully tighten the threaded spindle rods attached to the lower corners of the gate by further rotating the adjustment wheels. Continue by tightening the upper threaded spindle rods. As you tighten the threaded spindle rods, you will notice the gap between the door frame and the secure lift latch begin to narrow. In order for the gate to function properly, stop tightening the upper threaded spindle rods just before the inner wall of the locking latch and the gate frame touch.

NOTE: There should be equal spacing among each of the (4) threaded spindle rods. Make the appropriate adjustment to ensure you have installed your gate safely.


STEP 1

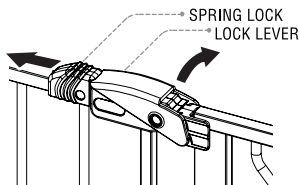

Pull the spring lock away from the secure lift latch while simultaneously lifting the lock lever upwards. This will release the locking latch from the gate frame and allow the door to push or pull open. To lock the door shut, close the door completely, then push down on the lock lever to re-engage the spring lock.

NOTE: If your secure lift latch is not properly engaging with the receiving component, ensure that your gate is level, mounted properly, and that you have not over-tightened the threaded spindle rods.

STEP 2

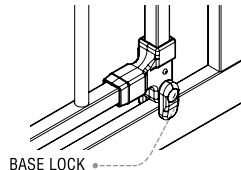


At the bottom of the gate door, rotate the base lock to the horizontal position to allow the door to swing open.

NOTE: Place lock down on side occupied by the child.

Positioning and Attaching Wall Cups


STEP 1

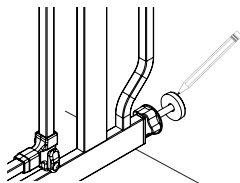

After you have mounted your gate, and you are satisfied with its positioning, draw a circle on the surface of your doorway or opening around the perimeter of the (4) rubber feet.


Next, completely remove the gate from the opening by loosening each of the (4) threaded spindle rods to depressurize the gate.

 STEP 2



With gate fully removed, you can now use the circles you marked during Step 1 as guides for screwing in your (4) wall cups (F). Center each of the wall cups within the guide circles and use the provided self-tapping screws (G) to fasten them in place via the hole through the center of each wall cup.


STEP 3

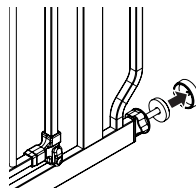

Reinstall your gate in the doorway or opening according to the instructions, using the newly installed wall cups as anchoring points for the (4) threaded spindle rods.

Adding a Gate Extension

STEP 1

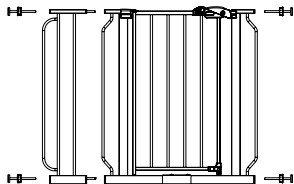

Remove the top and bottom threaded spindle rods.


Assemble the gate and extension as illustrated. Reposition the gate and fit in accordance with the gate fitting.

NOTE: It is preferable to install any extensions on the hinge side of the gate.

Need more width? Additional extensions sold separately
www.regalo-baby.com

Ajout d'une rallonge de barrière

ÉTAPE 1

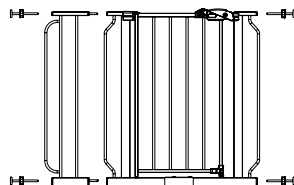

Enlevez les tiges filetées supérieure et inférieure.


Joignez la rallonge à la barrière, tel qu'illustré. Remplacez la barrière et ajustez-la conformément aux instructions d'encastrement.

REMARQUE : Il est préférable de poser les rallonges sur le côté des charnières de la barrière.

Vous avez besoin d'une largeur plus grande? Rallonges supplémentaires vendues séparément. www.regalo-baby.com

Cómo agregar una extensión de la reja

PASO 1

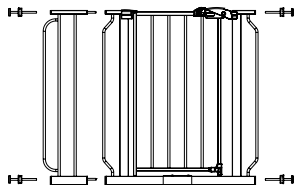

Retire las varillas roscadas superior e inferior.

Monte la reja y la extensión como se muestra. Vuelva a colocar la reja y ajústela de acuerdo con las instrucciones de montaje.

NOTA: Es preferible instalar cualquier extensión en el lado de la bisagra de la reja.

¿Necesita más ancho? Las extensiones adicionales se venden por separado www.regalo-baby.com

WARNING

NOTE: The gap between the gate and wall should not exceed more than 2.5 inches.

- Install according to manufacturer's instructions.
- To prevent serious injury or death, securely install gate or enclosure and use according to manufacturer's instructions.
- Children have died or been seriously injured when gates are not securely installed. Always install and use as directed using all required parts.
- You must install wall cups to keep gate in place. Without wall cups, child can push out and escape.
- Never stack gates on top of each other to form a taller barrier. This could result in serious injury or death.
- Stop using when a child can climb over or dislodge the gate.
- Use only with the locking mechanism securely engaged.
- To prevent falls, never use at top of stairs.
- Never use to keep child away from pool.
- Intended for use with children from 6 months through 24 months.
- Always ensure the gate is resting against the floor before beginning installation.
- This product will not necessarily prevent all accidents. Never leave child unattended.
- Check the gate regularly to see if all the hardware and mountings are tightened.
- Do not use if any component is missing or damaged.
- Adult assembly required.